



SET POINT REGULATING UNIT

949 Set point regulating unit

REGULATING UNIT



WARNINGS

The following instructions must be read and understood before installation, commissioning and maintenance of the manifold.



CAUTION

Failure to follow these instructions may result in a safety hazard.

FUNCTION

The regulation unit functions to lower and maintain the temperature of the heat transfer fluid through a 3-way mixing valve. The reduced footprint of only 88 mm in depth allows it to accommodate directly on board the manifold, in low-thickness walls.

INSTALLATION

The regulation unit must be installed by a qualified installer in accordance with national regulations and/or local requirements. If the control units are not installed, put into service, and maintained properly according to the instructions in this manual, they may not work properly and may put the user at risk.

Make sure that all connection fittings are hydraulically sealed. When making hydraulic connections, be careful not to over-raise the threads mechanically. Over time, breaks may occur with hydraulic leaks to damage to things and/or people.


Water temperatures above 50 ° C can cause severe burns. During installation, commissioning and maintenance of the control units, take the necessary steps to ensure that such temperatures do not endanger people.

COMPONENTS:

1. 3-way mixing valve
2. Thermostatic head with contact probe
3. Variable speed circulator
4. Safety thermostat 55 °C normally closed
5. 1" swivel fittings
6. Flow temperature gauge
7. Return temperature gauge



SET POINT REGULATING UNIT

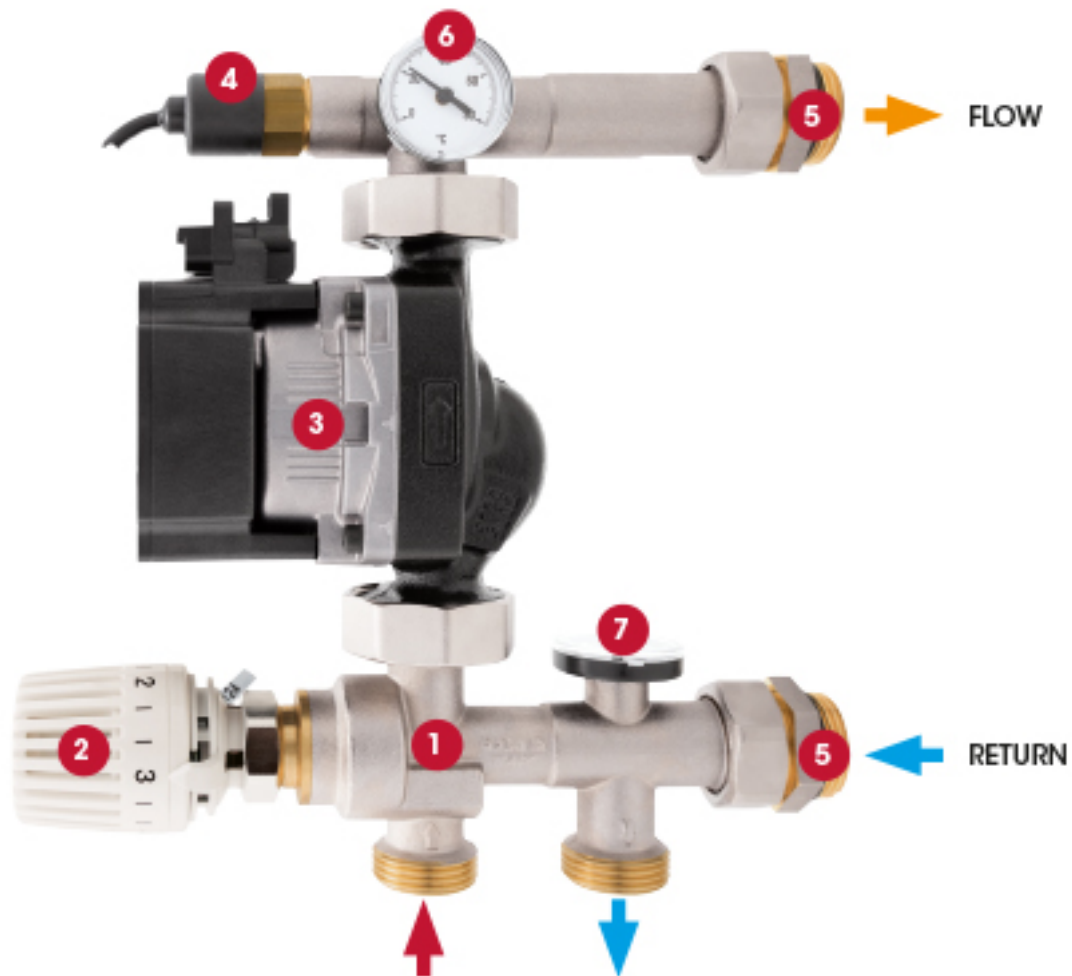

Regulation of the flow temperature:

The thermostatic head adjusts the flow water temperature in the low temperature circuit. To set the temperature, simply rotate the head to the desired value, matching the adjustment scale with the thermostatic head indicator.

Once the temperature has been set, check with the thermometer on the supply circuit that the temperature corresponds to the desired value.



Circulator characteristics:

The circulator can be set to operate in proportional pressure (PP), constant pressure (CP) or constant curve (CC) mode. For underfloor heating circuits, the recommended mode is constant pressure (CP), so that the available head is kept constant regardless of the heat demand of the system. For each mode, 3 different speed levels are available: lower (1), intermediate (2)




SET POINT REGULATING UNIT

and higher (3). Using the AUTOADAPT (AA) function, the circulator adapts its performance automatically based on the size of the system and the varying conditions over time.

To set up the product, use the button on the control panel. Each time the button is pressed, the pump setting changes. The LEDs will indicate the selected control mode, according to the following diagram:

| Mode | LED 1 | LED 2 | LED 3 | LED 4 | LED 5 |
|------------------------------|-------|-------|-------|-------|-------|
| PP AUTO <small>ADAPT</small> | ● | | | | |
| CP AUTO <small>ADAPT</small> | | ● | | | |
| PP 1 | ● | | ● | | |
| PP 2 | ● | | ● | ● | |
| PP 3 | ● | | ● | ● | ● |
| CP 1 | | ● | ● | | |
| CP 2 | | ● | ● | ● | |
| CP 3 | | ● | ● | ● | ● |
| CC 1 | | | ● | | |
| CC 2 | | | ● | ● | |
| CC 3 | | | ● | ● | |

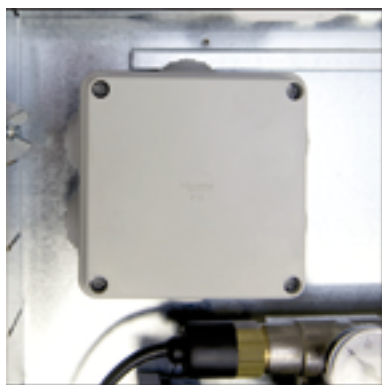


The wiring case has all the connections required for the regulation unit: boiler enable signal (NO), room thermostat (TA), safety thermostat (TS) and pump power (POMPA). It has to be powered at 230V.

- EXAMPLE OF SINGLE-ZONE INSTALLATION

For single-zone systems, simply wire the components to the wiring case - no other cabling is required. When the room thermostat's ON-OFF contact closes (i.e. the room temperature is below the setpoint) it sends the enable signal to the boiler (NO contact) thus turning on the mixing unit circulation pump.




SET POINT REGULATING UNIT

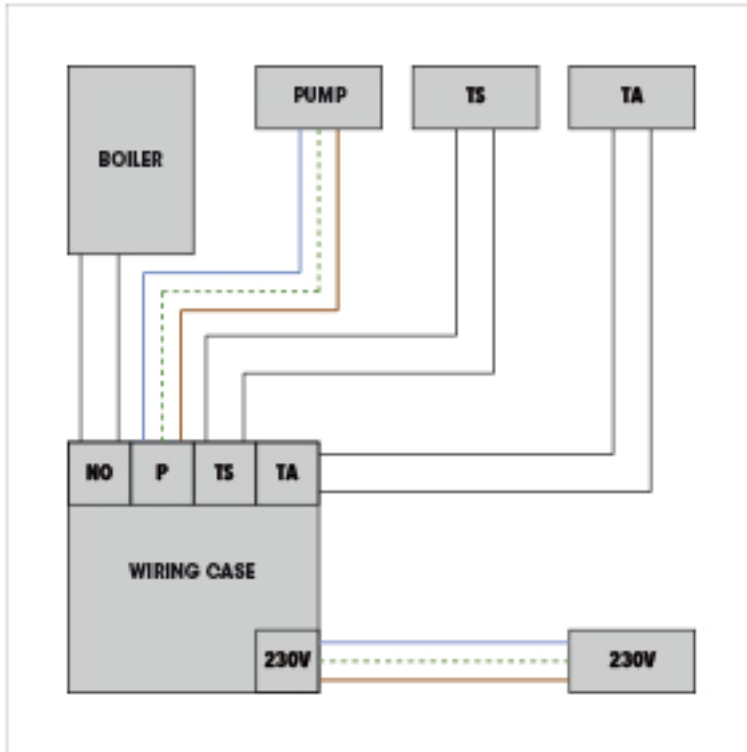

- EXAMPLE OF MULTI-ZONE INSTALLATION


Multi-zone systems require the use of thermo-electric actuators with auxiliary micro-switch (not included) and a room thermostat for each zone. The room thermostat's ON-OFF contact must be connected to the power cable wires (blue and brown) of each thermo-electric actuator, while the auxiliary micro-switch wires of all actuators in all zones must be connected to the TA contact. This means that the room thermostat contact will open the actuators connected to it which, once they are completely open, send the enable signal to the boiler and to the mixing unit's circulation pump.

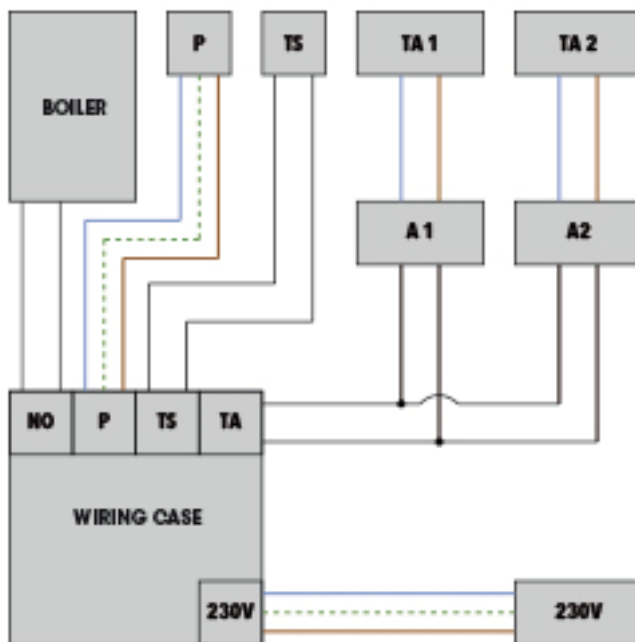


AVAILABLE HEAD OF PRESSURE AT MIXING UNIT CONNECTIONS



SET POINT REGULATING UNIT

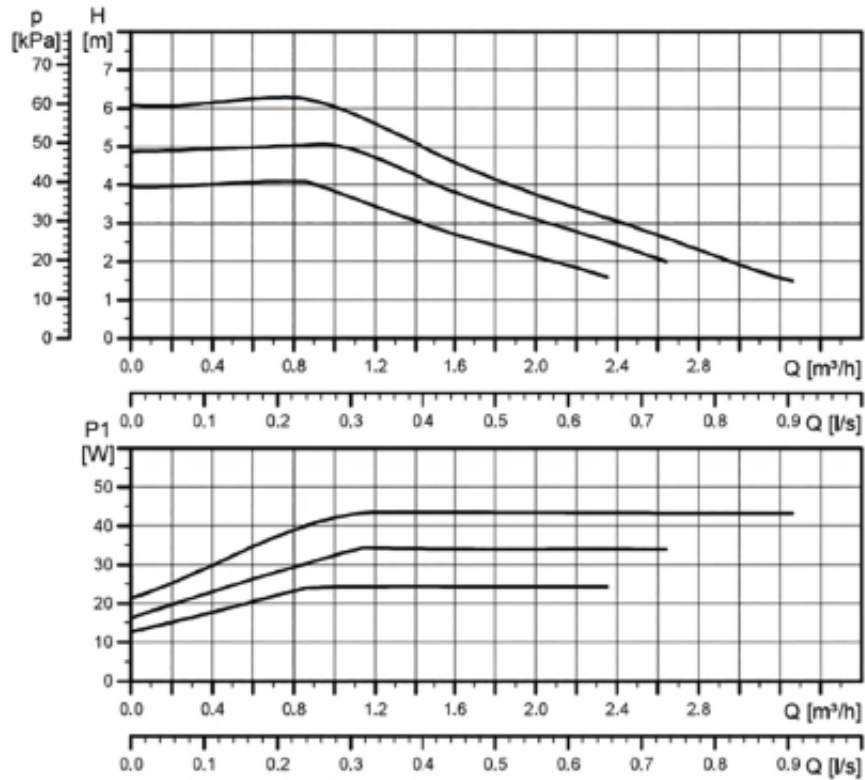


CIRCULATOR GRAPH

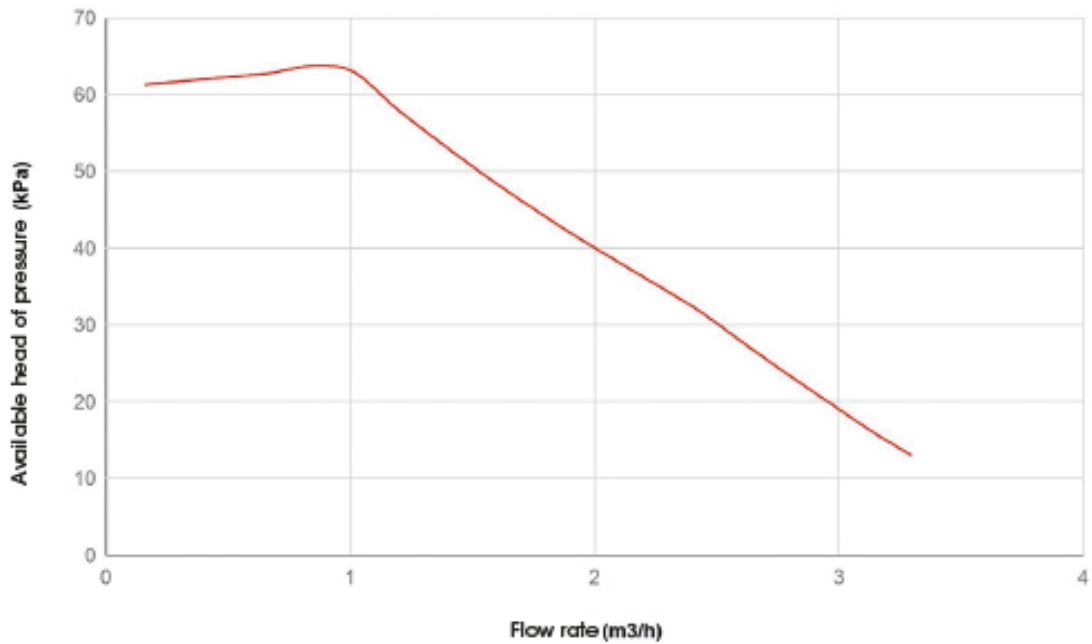


REGULATING UNIT PRESSURE DROP



SET POINT REGULATING UNIT

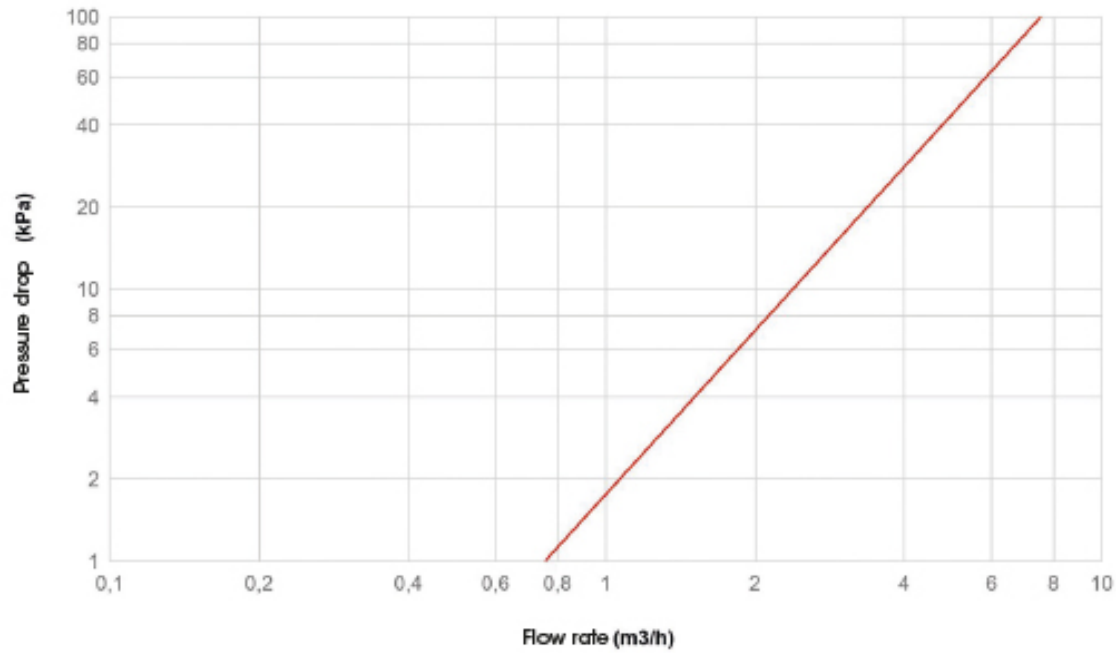

POSITIONING THE REGULATING UNIT INTO THE METAL BOX

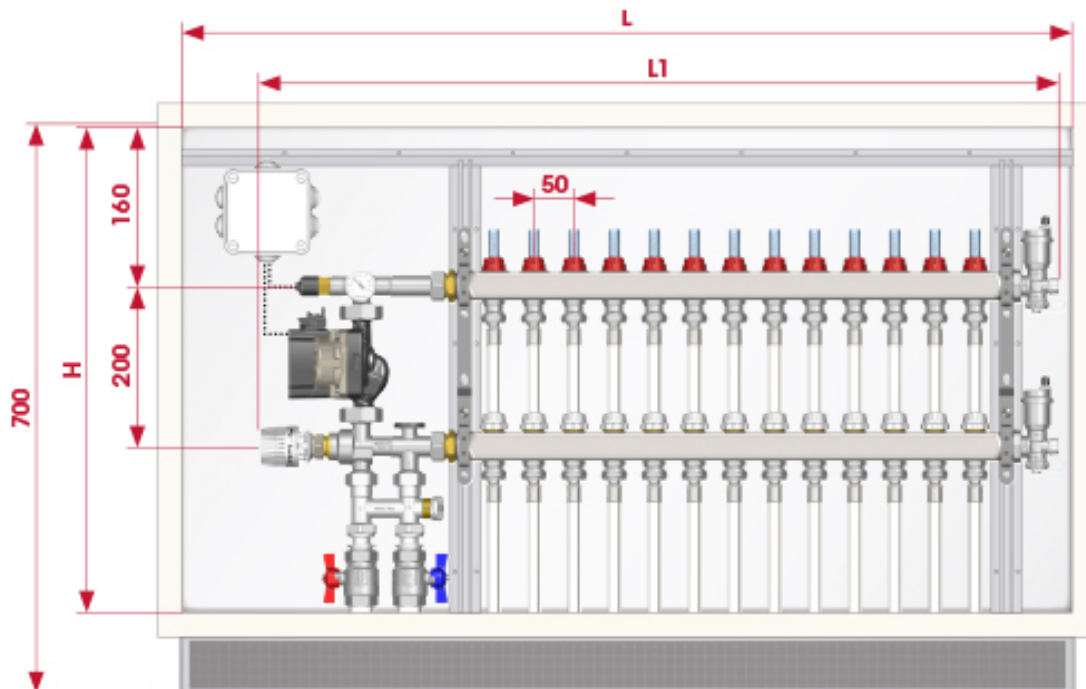

| CODE | 498.600.600 | 498.700.600 | 498.800.600 | 498.1000.600 | 498.1100.600 |
|----------|-------------|-------------|-------------|--------------|--------------|
| LxH (mm) | 600x600 | 700x600 | 800x600 | 1000x600 | 1100x600 |
| N. ways | 2-3 | 4-5 | 6-7 | 8-9-10 | 11-12-13 |
| MANIFOLD | 1" | | | | |
| L1 | 498 | 598 | 698 | 848 | 998 |


CONSTRUCTION

The regulating unit is housed in a galvanised steel box (depth 90 mm), which makes it ideal for installation in thin walls. To



SET POINT REGULATING UNIT

protect the contents of the enclosure and facilitate the necessary masonry work, it is fitted with a galvanised steel cover, which mounts to the front of the enclosure with four screws. The cover has a 1 cm rim, which acts as a plastering guide. Both the front and back of the enclosure are fitted with mesh to prevent the plaster retracting and cracking. Once the enclosure has been installed and plastered over, remove the cover and fit the frame and door with the four screws. These are made of galvanised steel with a white (RAL9010) coating and protective film which is removed at the end of the installation process. The base of the enclosure is adjustable vertically by 100 mm, while its door can be adjusted inwards or outwards by 50 mm. The roof of the enclosure has holes for routing the electrical cables.

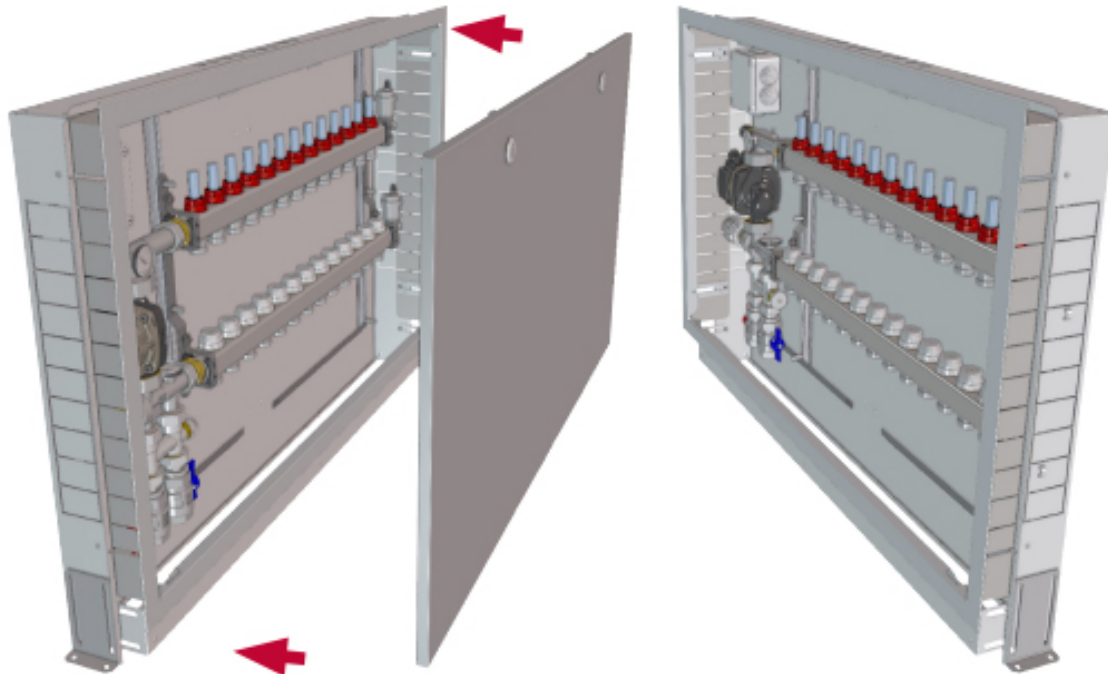

The 3-way mixing valve has 20 mm inside diameter. This large diameter means that the medium can be heated up to the desired temperature quicker than with units with smaller diameter ports. The result is that the circulator pump runs for less time throughout the day, which considerably reduces its power consumption. An additional saving is represented by the use of variable speed circulator pumps compliant with Directive ErP 2015 (starting from January 1st 2013), which considerably reduces power consumption and promote the new concept of eco-design.

INSTALLATION OF REGULATING UNIT

1. The control unit is supplied with the connection of the main pipes down, with the outlet on the left and the return on the right.
2. Using the swivel fittings, connect the unit to the secondary pipes or distributor manifolds, paying attention to connecting the supply circuit to the outlet at the top and the return circuit on the bottom one.
3. Connect the primary circuit bypass (optional) and the ball valves (optional), paying attention to connecting the supply circuit to the left and the return circuit to the right.
4. Connect the main pipes.

PRIMARY CIRCUIT BY-PASS



The by-pass for the primary circuit (optional) allows the hydraulic separation between the primary and secondary circuit. This hydraulic separation optimizes the operation of the secondary circuit and prevents changes in the flow rate of the primary from affecting the secondary circuit. The flow rate that passes through the respective circuits depends exclusively on the flow rate characteristics of the pumps, avoiding the mutual influence due to their coupling in series.

An adjustable differential valve is placed on the by-pass, whose intervention value can be changed using the appropriate knob.



SET POINT REGULATING UNIT

If the secondary circuit is closed, the differential valve opens to allow the water to return to the boiler.

GENERAL INFORMATION

This appliance may be used only for its intended application. Any other use is improper and dangerous. This appliance is designed for heating water to a temperature below boiling point at atmospheric pressure.

The appliance is designed only for installation indoors, in the room or suitably equipped rooms. It may not be installed or operated outdoors. Installing the unit outdoors may cause malfunction and hazards. For outdoors installations, we recommend the use of equipment designed specifically for such applications.

Before wiring the unit, have all circuit pipes flushed by a professionally qualified technician to remove any residue or impurities capable of compromising the operation of the boiler.

The appliance must be installed in conformity with the instructions given in this manual. The installation must be done by a professional technician, liable for the observance of all applicable local and national legislation published in the official gazette, as well as applicable technical regulations.

Install the appliance only to a closed wall made of non-flammable material, which is flat and vertical and provides the minimum clearances necessary for installation and maintenance.

The installation must be done in compliance with the standards, regulations and instructions given in this manual, which constitute a non-exhaustive list of applicable regulations which are subject to change with developments in good practice. The installation technician is responsible for ensuring compliance with applicable regulations.

The installation must be done in compliance with the standards, regulations and instructions given in this manual, which constitute a non-exhaustive list of applicable regulations which are subject to change with developments in good practice. The installation technician is responsible for ensuring compliance with applicable regulations.

Do not leave the packaging materials within the reach of children as they are potentially hazardous. The manufacturer is not liable for any damage or injury to property, persons or animals resulting from failure to comply with the above instructions.

This manual is an integral and essential part of the product and is supplied with every regulation unit sold. Keep it for reference.

Please read the information in this manual carefully; it provides important information for the use and maintenance of the product. Before cleaning or servicing the product, disconnect it from its power supply with the system's master power switch or circuit breakers. If the unit fails or malfunctions, switch it off immediately; do not attempt to repair it or work on it in any way. It may only be repaired by a legally authorised technician.



CAUTION

Leave this manual for use and service of the user.

The installation and wiring must be done by a qualified technician.

We reserve the right to make improvements and changes to the products described herein and to the relative technical data, at any time and without forewarning.